



tap this wire into the secure Idle black wire of the push button

this wire goes to the gun lock

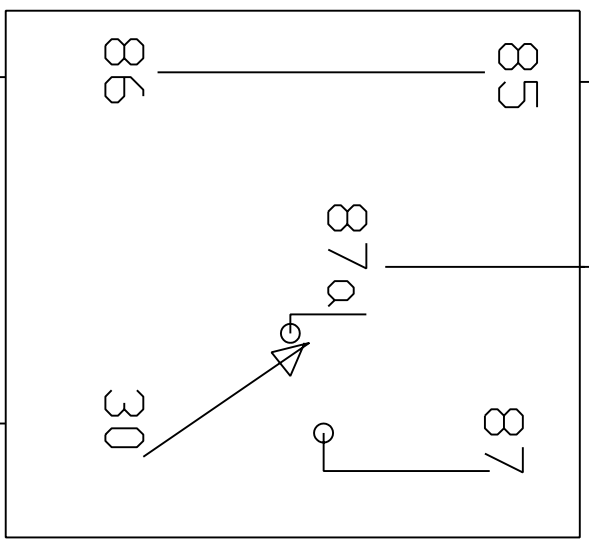

cut the wire going from the siren control gun lock button to the gun lock and attach the button end to pin 30

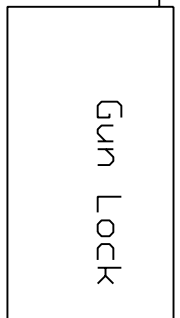