


Wireless Ignition Node Connector

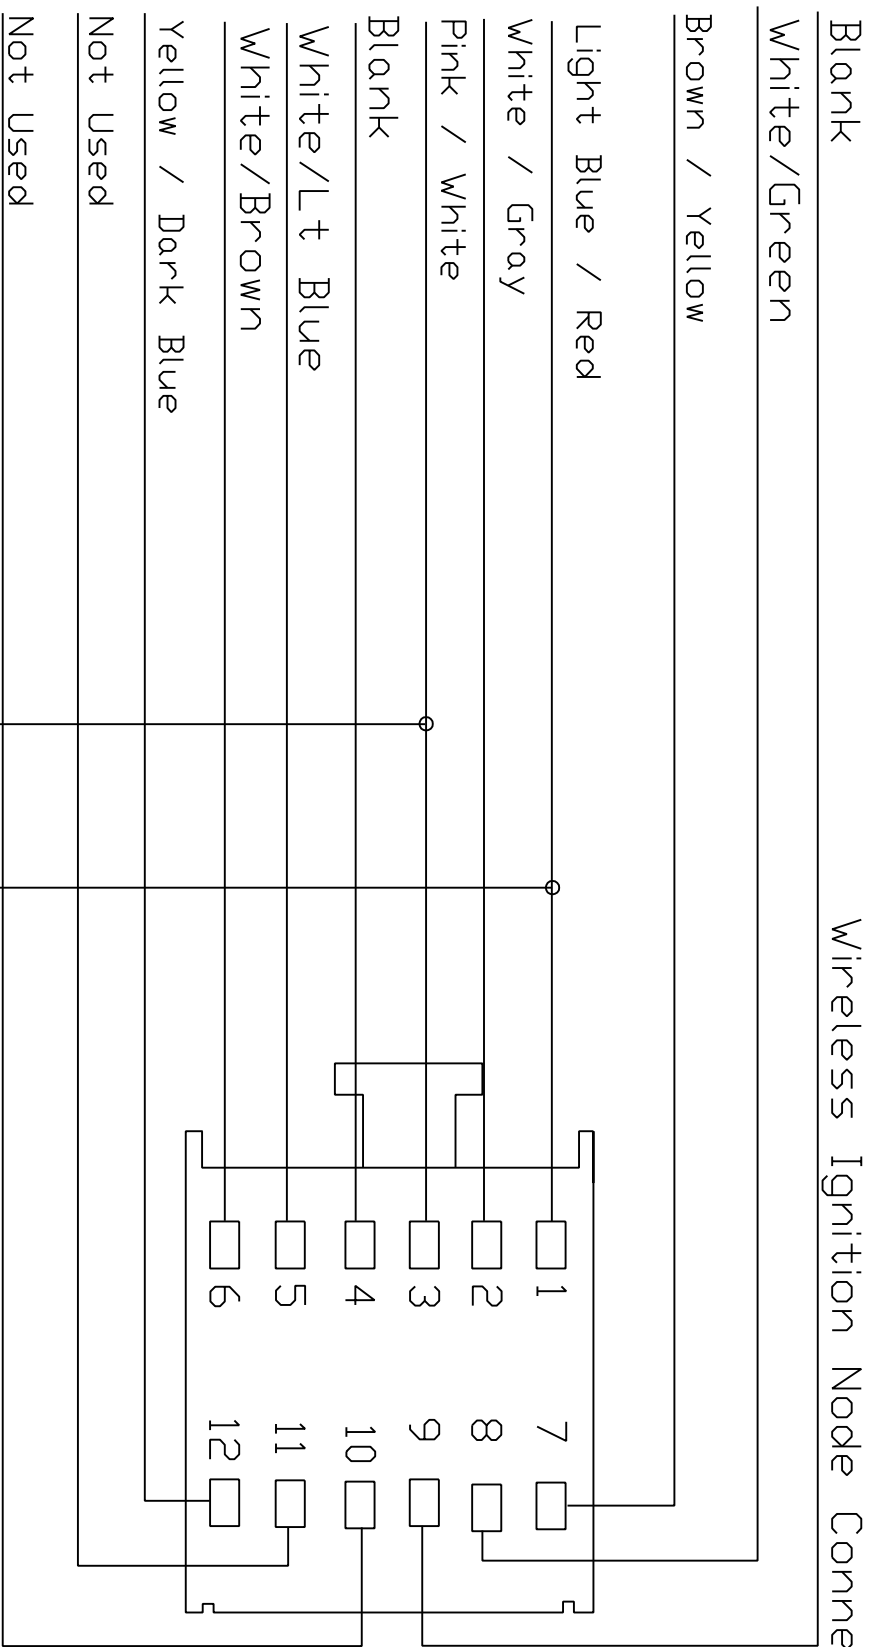

Attach brown wire to
Auxiliary relay (use Dwg.
01-00888)

SI 340 TK 06

SECURE IDLE

Chassis Make DDDFGE Year 16/20

Title CARAVAN

Size A DWG NO: 01-0706