


Wireless Ignition Node Connector

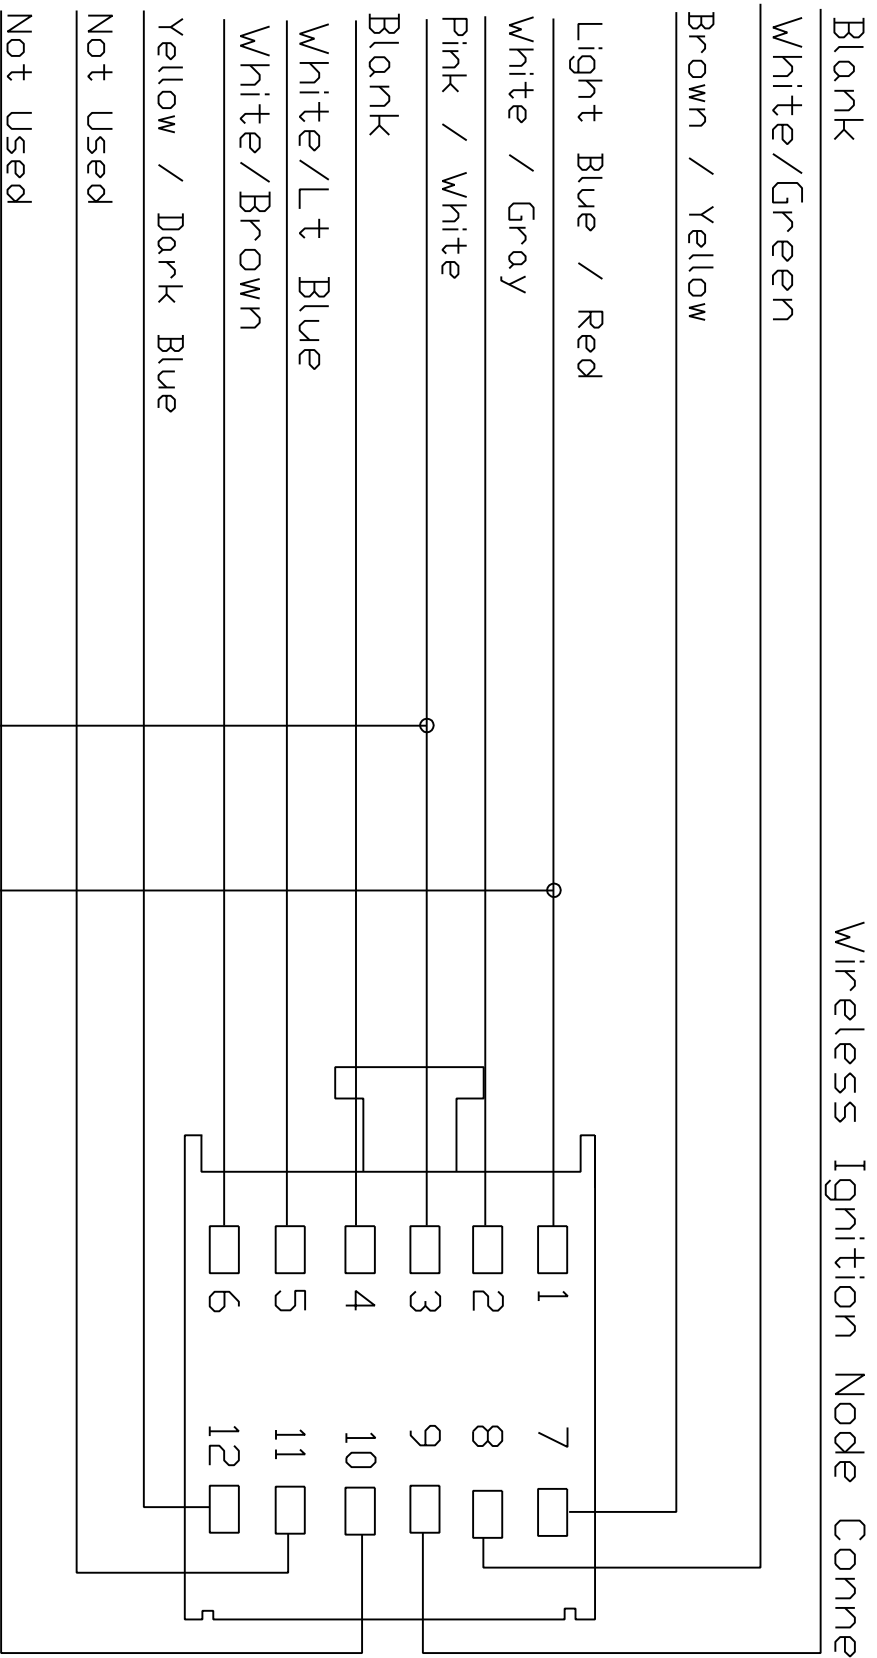

Attach brown wire to
Auxillary relay (use Dwg.
01-00888)

SI 340 TK 06

SECURE IDLE	
Chassis Make	DODGE
Year	16/20

Title	
CARAVAN	
Size	DWG NO:
A	01-0706